

61 62 63 64
#2 Floor

61 62 63 64
#2 Floor

36 37 38

Upper Hori. Lt. Batten

R8 35 34 33 32 R7 31 30 29 28 27 26 25 24 R6 23 22 21 20 R5

#3 Light Batten

R4 19 18 17 16 R3 15 14 13 12 11 10 9 8 R2 7 6 5 4 R1

#2 Light Batten

9 10 11 12
#1 Floor (R/D)

9 10 11 12
#1 Floor (R/D)

1 2 3

#1 Light Batten

58 59 60
SR Front Side

55 56 57
SL Front Side

54 53 52 51 50 49 48 47 46 45 44 43 42 41 40 39 Apron Light Batten

노원 문화예술회관 소극장
Circuit Plan
 Update: 2009-6-1
 Scale: No Scale